



CHANGE ASM CODE SO THAT YOU ARE DIVIDING DOWN A 10MHz REFERENCE CLOCK VIRSSES A 13MHz REFERENCE CLOCK AS THE LMX2325 USES THE 10MHz TCXO FOR IT'S REFERENCE CLOCK.

REMEBER THAT THIS YIG SYNTHESIZER DIVIDES YOUR INPUT SIGNAL BY 4 BY USING THE ONBOARD PRESCALER SO YOUR RF SIGNAL YOU ARE REALLY WORKING WITH IS RF/4 AND NOT RF!

REMOVE D1, D2, R1, & Q1 IF USING A 5VDC SUPPLY!

VDB ENGINEERING, INC.			
Title		PLL SYNTHESIZER CONTROLLER	
Size A	Document Number AT90S1200		Rev A
Date:	Friday, July 28, 2006	Sheet	1 of 1